
SHALLOW-DIP-TECHNOLOGY + CONTACT HEAT

3600W or ProStyle 4500W combined Power

STAY-COOL EDGES

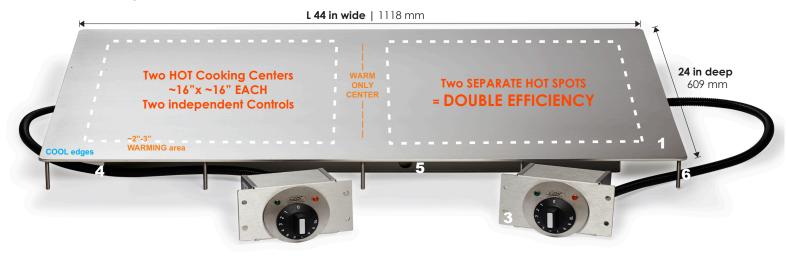

>> MUST READ ALL PAGES !!!

TEPPANYAKI GRILL SPECIFICATIONS

Size: 44" x 24" x 2" install height | 111.8 x 60.9 x 5 cm H

Material: Professional Food Grade Best Alloy German Stainless Steel type 304 (V2A) 5/32" thick (4 mm | 8 gauge) cold pressed, hand-welded + hand-finished Silk-brushed (matte)

Power: 2x 1800 Watt | 1.8 kWh on high

Electric: 120V | 50-60 Hz | 2x 20 AMP

ProStyle 240V | 2x 2250 Watt | 2x 10 AMP

Analog temperature control: 1-10 dial | 2 indicator lights | thermostat Contact Heat: 130°F to 450°F (55°-230°C)

5 Year Limited Manufacturer Warranty on Material + Craftsmanship. Up to 2 Year limited manufacturer Warranty with online registration parts & labor. VDE issued European Safety Approval. Electrical + Electronic Components: UL approved.



For full warranty, policies and details refer to https://www.cook-n-dine.com To register the appliance for 12 months additional

warranty protection, scan the QR code >>>>>>







INDOOR + OUTDOOR USE | IPX4 RATED ~740 sq/in Total Cooking Area

TWO (2) INDEPENDENT CONTROLS
TWO (2) INDEPENDENT HOT CENTERS
forms TWO SEPARATED Cooking Wells

IMPORTANT

WILL NOT FIT ABOVE 24" DEEP CABINETS!

Minimum counter depth required is 36 inches.

Temperature Control Options:

- control box "B" for interior mount (default)
- control box "A" for open mount + outdoors
 - **4** MM SOLID 304 STAINLESS STEEL TOP
 - CONTROL BOX "A" for open under mount
 - 3 CONTROL BOX "B" for concealed cabinet mount
 - 4 FLEXIBLE CONDUIT
 - 5 SEALED HEATING ELEMENT ENCLOSURE
 - STAINLESS STEEL MOUNTING STUDS 1-3/4" stainless steel fastening hardware is included

TWO 10 FT. POWER CORDS, included (3 m/ea)

Ship weight: 107 lbs. | ship size 55" x 34" x 7" Ship weight: 50 kg | ship size 141 x 89 x 18 cm Ships Common Carrier on pallet.


Manufacturer reserves the right to change or alter the the appliance at his own discretion without notice.





Electrical Rating: 120V | 2x 1800 Watt | 2x 15 AMP | 50-60 Hz | requires 2 dedicated outlets with 20AMP breaker each. or select ProStyle 2250W-240V, 10 AMP/ea ALWAYS Check control box label for correct voltage BEFORE plugging in! Bolts are 1-3/4 inch (45 mm) long; bolt diameter is 13/64" (5 mm) Always Check control box label for correct voltage BEFORE plugging in!

!!! IMPORTANT: DO NOT DRILL NOR CUT ANY HOLES BEFORE UNIT IS PHYSICALLY PRESENT !!!
!!! DO NOT CUT OFF THE BOLTS!!! DO NOT OPEN CONTROL BOX OR WARRANTY BECOMES VOID!!!

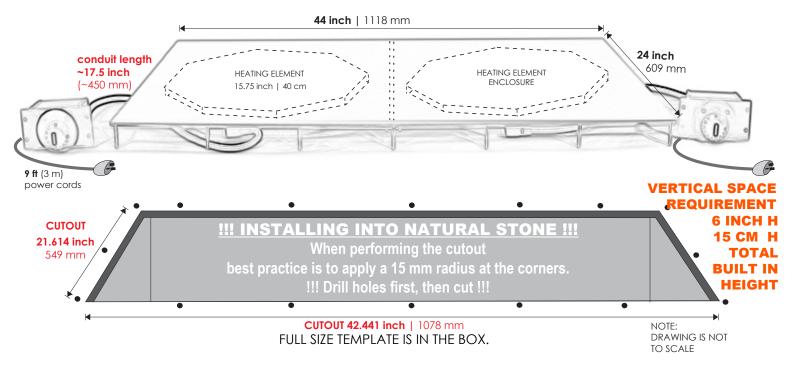

>> Control Box MUST be firmly fastened to a NON-MOVING surface. Power Cords and Conduits must be secured.

CAUTION: DO NOT SNAP, PULL or TWIST THE CONDUIT DURING INSTALLATION!!!

Warranty becomes void if capillary tube (thermostat) inside the conduit is damaged during installation.

- **1.** Mark bolt holes, drill 5/16 inch $\underline{\emptyset}$ | 8 mm \emptyset bolts will fit holes loosely. Clean counter surface thoroughly!!!
- 2. Clean underside edges of unit and counter top around cut out with rubbing alcohol or similar. Optional: Apply thin bead of Silicone Sealant - not glue - around the edges of the underside of the unit. This protects from potential moisture intrusion. Mandatory when installed outside without weather cover. !!! IMPORTANT: MAKE SURE TO PREVENT SILICONE FROM GETTING INTO THE BOLT HOLES !!!
- **3.** Slide cook top into place. Do not apply excessive force. Unit needs to slide in without any resistance. Press down evenly to compress Silicone. Secure <u>ALL* BOLTS</u> with supplied nuts and washers from underneath to ensure proper function. Find nuts, washers and the extension key for "B" control in a small plastic bag inside the box. !!! IMPORTANT: Tighten nuts with hand tool only. Do not use any power tools!!! *otherwise warranty becomes void.
- **4.** Mark, drill and fasten the control box into place REFER TO SEPARATE INSTALL SHEET FOR "B" CONTROL Optional: seal the round metal plate with Silicone to prevent potential moisture intrusion.


Connect the power cord <u>VERY FIRMLY</u> to the rear of the control box. IMPORTANT: Check label and outlet for correct voltage!!! Now connect the electrical 3-prong plug (other end) to a properly grounded power outlet.



PAGE 2 of 3

Bolts/studs are 1-3/4 inch (45 mm) long; bolt/stud diameter is 3/16"∅ (5 mm) → drill 5/16"∅ (8 mm) !!! VERY IMPORTANT:

DO NOT CUT OR DRILL BEFORE UNIT IS PHYSICALLY PRESENT. DO NOT CUT OFF THE BOLTS/STUDS

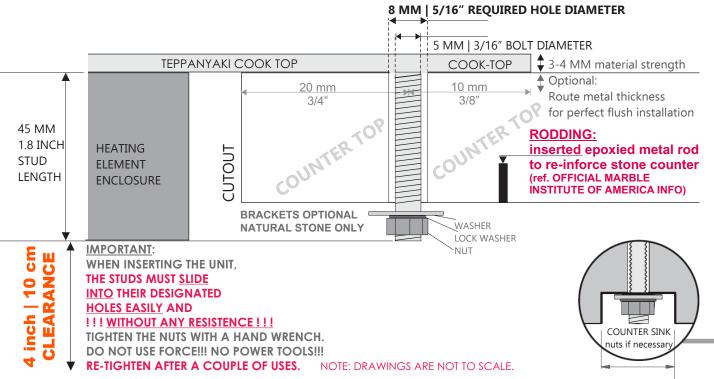

ATTENTION !!! MUST READ !!! INSTALLATION INTO STONE/GRANITE COUNTER TOPS

Please be reminded that the CND stainless steel teppanyaki grill surface will flex slightly when switched on thus developing a shallow dip in the cooking center. This motion is intended and is counteracted by the secured studs, which hold the unit in place. Talk to your supplier and installer ahead of time. You must provide them with a full set of install sheet documentation at that time. An experienced stone professional will be able to advise on all aspects to watch out for, e.g. on how much counter-top ("meat") is necessary at the narrowest point for the particular stone of choice to accommodate a Cook-N-Dine built-in teppanyaki appliance properly.

MO-80: Absolute minimum 6 inches from counter edge to edge of cooking top are strongly advised.

IMPORTANT NOTE: COUNTER TOP THICKNESS OF ~1.5 IN (40 mm) IS MANUFACTURER ADVISED UNLESS MATERIAL HAS BEEN RE-INFORCED BY MEANS OF RODDING OR COMPARABLE.

RODDING is a professional business practice to strengthen porous, fissured or "brittle" Natural Stone/Granite. Narrow areas of material surrounding large cutouts (e.g. sinks, cook tops) are **reinforced on the underside** This will support and strengthen those areas and is intended to distribute pressure more evenly. CND offers 304 stainless steel, made-to-order 12 gauge pre-punched <u>angle brackets (order separately)</u> which can be installed along the full length of the cutout (both long sides). The unit is then fastened through the brackets' pre-punched holes (see above). Stress applied to the counter material during operation should thus be evenly distributed. VERY IMPORTANT: The use of brackets cannot guarantee the prevention of damage. Everything strictly depends on the natural properties of the stone. Therefore, the manufacturer cannot be held responsible for any type of damage to stone counter tops due to installation/operation of this appliance.

! Make sure to HAVE THE UNIT and ALL install sheets ON SITE ahead of time for counter top templating!

CAUTION: DO NOT SNAP, PULL or TWIST THE FLEXIBLE CONDUIT DURING INSTALLATION!!!


Warranty becomes void if capillary tube inside the conduit (thermostat) is damaged during installation.

CONTROL BOX MUST BE FIRMLY FASTENED TO A NON-MOVING SURFACE.

Warranty will expire if capillary tube inside the conduit is damaged during installation.


Control box must be firmly fastened to a non-moving surface.

>> VERY IMPORTANT: Do not open the control box or warranty becomes void!!!

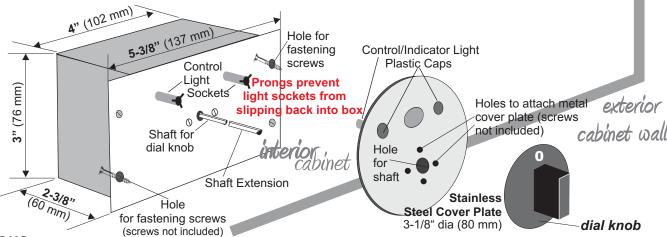

DIRECTIONS:

- 1. Remove packaging and carefully pull off the DIAL KNOB ONLY while holding on to the round plate. Do not use force or tools!
- 2. Now separate the round steel plate from Control Light Sockets by carefully wiggling it away WITH the yellow and green light plastic caps Hold one with two fingers and gently pull plate away; repeat with other. Yellow and green PLASTIC CAPS STAY IN PLACE in the plate.)
- 3. Mark all necessary holes utilizing the provided template below. Drill required holes and gently thread light sockets through their designated openings. <u>DO NOT SNAP THE PRONGS!</u> Now fasten the box to interior of cabinet wall or underside of counter top.
- 4. Gently pull light sockets out a little bit and re-connect with plastic caps in the metal plate; affix plate with two small flathead screws, or silicone into place. CAUTION: DO NOT TWIST OR SNAP DELICATE WHITE WIRING OF INDICATOR LIGHTS.
- 5. Connect the hollow extension to shaft if needed (packed with nuts + washers). Slide dial knob onto stem (match flat side of stem with flat side of female receptacle at back of knob). Do not use force. The "0" has to align centered below the gb logo; 12 o'clock

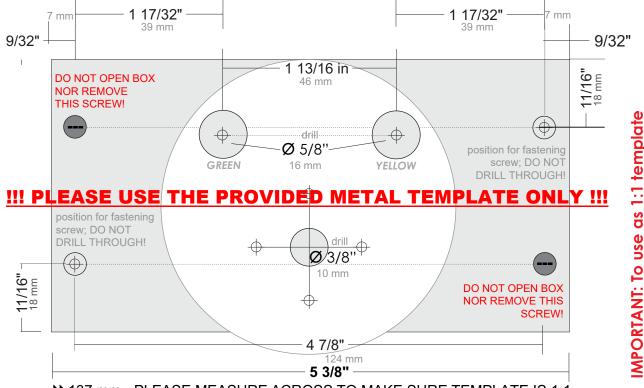

▶ 137 mm - PLEASE MEASURE ACROSS TO MAKE SURE TEMPLATE IS 1:1

set "page scaling" to "none" when printing